NETKEY

NETWORK COMPONENTS
CONTRACTOR GRADE

NETKEY Solder Type Connectors

Part Numbers: NKRSMB**Y, NKRSMR**Y, NK35MSS**

© Panduit Corp. 2008

INSTALLATION INSTRUCTIONS NK397B

NETKEY Solder Type RCA Module

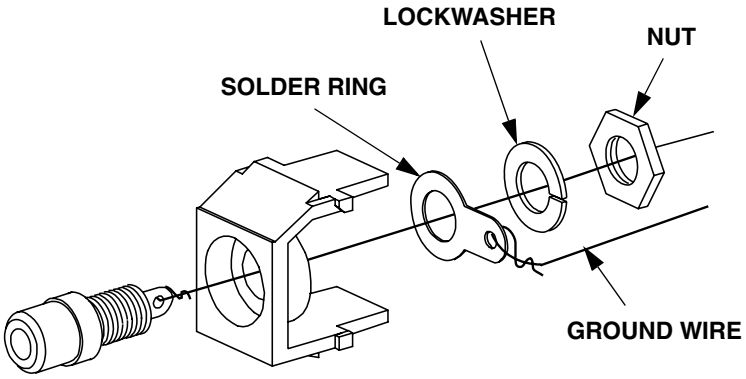

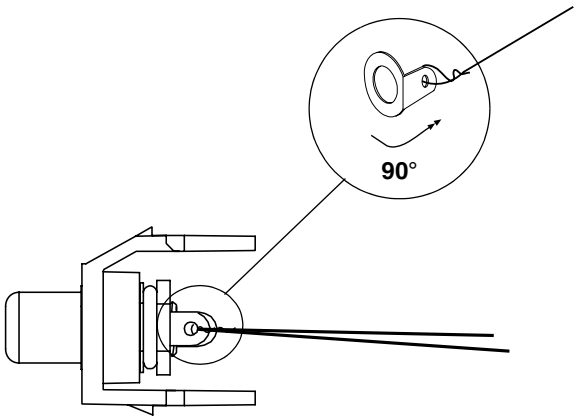

STEP ONE

A. SLIDE SOLDER RING, LOCKWASHER, AND NUT ONTO SIGNAL WIRE.

B. PULL SIGNAL WIRE THROUGH MODULE.

C. LOOP WIRE THROUGH HOLE IN RCA AND TWIST.

D. SOLDER WIRE TO BACK OF RCA.

STEP TWO

A. ASSEMBLE SOLDER RING, LOCKWASHER, AND NUT TO RCA-MODULE SUBASSEMBLY.

B. LOOP GROUND WIRE THROUGH SMALL HOLE IN SOLDER RING AND TWIST.

C. SOLDER GROUND WIRE TO SOLDER RING.

STEP THREE

A. BEND SOLDER RING TAB 90°.

NETKEY 3.5mm(1/8") Solder Type Headphone Jack Module

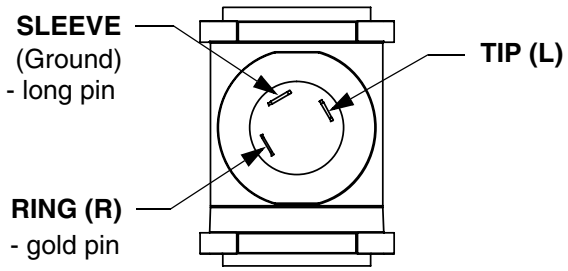

Fig. 1

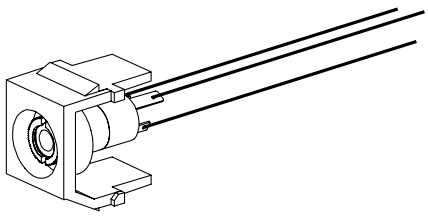

A. REFER TO FIG. 1 FOR WIRE PLACEMENT.

B. SOLDER WIRES TO CORRECT TABS ON THE BACK OF CONNECTOR.

For Instructions in Local Languages and Technical Support:
www.panduit.com/resources/install_maintain.asp

PANDUIT
www.panduit.com

E-mail:
cs@panduit.com

Fax:
866-449-1702